
TROLMASTER TO 0-10V CONVERTER INSTALL INSTRUCTIONS

FŌHSE™


FUTURE OF HORTICULTURAL SCIENCE + ENGINEERING

09-2023


INSTALL PROCEDURE

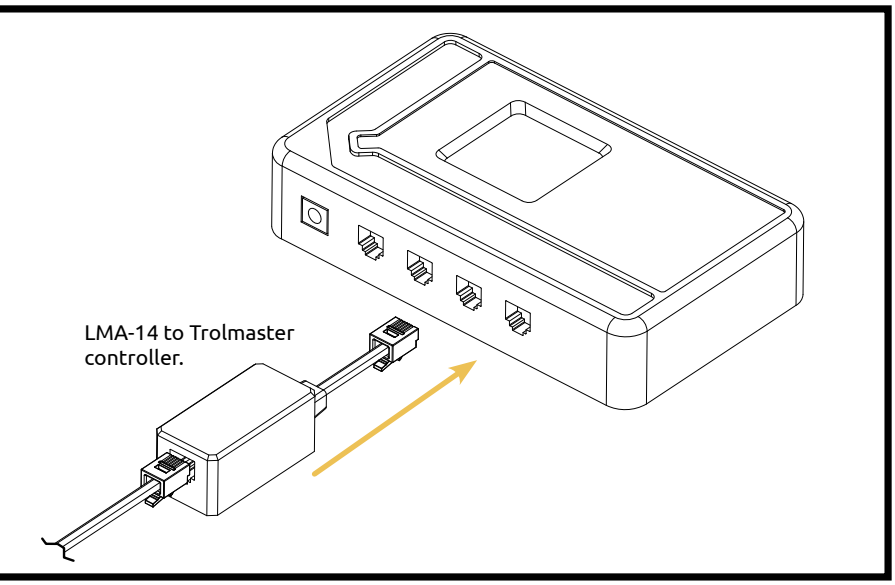

Plug the LMA-14 Lighting Adaptor into one of the “Line” ports on the Trolmaster controller.

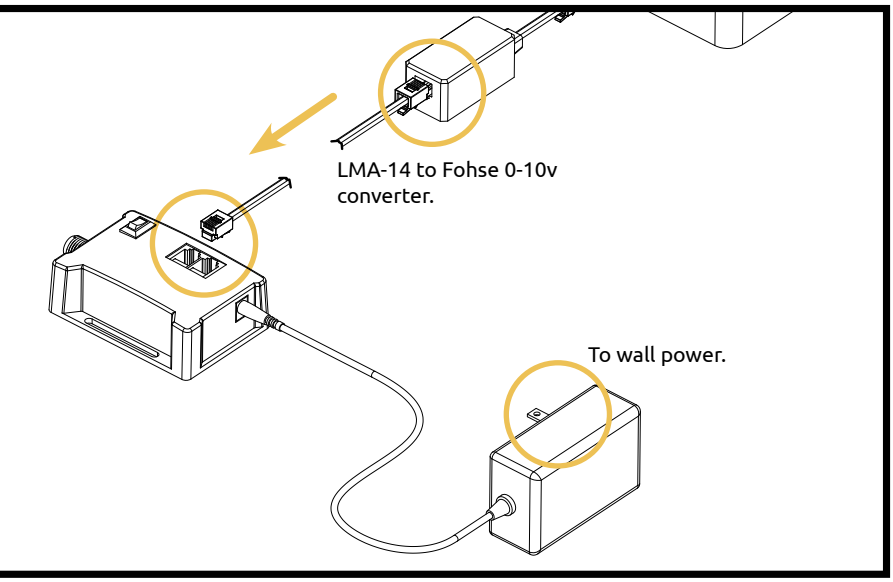

Plug the RJ11 cable supplied with the Fohse 0-10v converter into the LMA-14 port. The other end of the cable will plug into the Brightness RJ11 port on the 0-10v converter. The supplied power adaptor will be plugged into a power source.

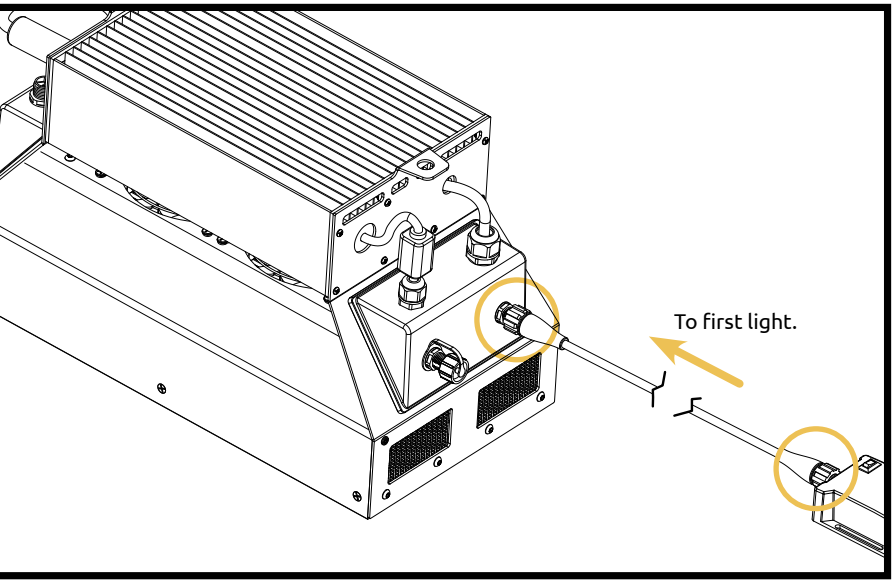

Use a communication cable to plug one end into the 0-10v converter, then plug the other end into the first Fohse fixture.